

## Questions to consider with discrete data: How quickly and how long to sample?

Name	Symbol	Associated question		
Highest frequency	B	Highest expected frequency? (Hz)		
Frequency resolution	$\Delta \omega_{ ext{H}}$	How fine a resolution in the frequency domain?		
Sampling rate	$\Delta t < \frac{1}{2B}$	How often do you sample the function? (Nyquist criteria)		
Total sampling time	$t_{\rm final} > \frac{1}{\Delta \omega_{\rm H}}$	How long do you sample?		
Note: If you want fine resolution in the frequency domain (e.g., resolve differences between 0.012 Hz and 0.013 Hz)				
you must sample for a long time. However, you do not necessarily have to take many samples.				


**Ideal:** Sample quickly (small  $\Delta t$ ) to "hear" highest frequency. Sample for a long time (large  $t_{\text{final}}$ ) to get fine frequency resolution (small  $\Delta \omega_{\text{H}}$ ). The cost is a large **number of samples**  $N = \frac{t_{\text{final}}}{\Delta t}$  (collect data frequently and for a long time).

## Earthquakes and building shaking

Listed below are geometry and material for three "buildings":

Description	Symbol	Value
Building heights	$h_1$	10 cm
	$h_2$	$20~\mathrm{cm}$
	$h_3$	$30 \mathrm{cm}$
Mass of block	m	50 g
Radius of wire	r	$0.75 \mathrm{\ mm}$
Wire elastic modulus	E	$200 \times 10^9 \text{ N/m}^2$

The solid cylindrical wire's bending area moment of inertia is  $I \,=\, \frac{\pi\,r^4}{4} \,=\, 2.65 \times 10^{-13} \; {\rm m}^4$ 

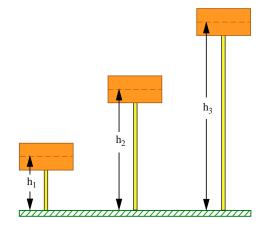

Each building's bending stiffness  $k_i$  is approximated using E, I, and  $h_i$  (i = 1, 2, 3) as follows. Next, each building's natural vibration frequency is approximated as (in Hz =  $\frac{\text{cycles}}{\text{sec}}$ )

$$k_1 = \frac{3EI}{h_1^3} = 159 \frac{\text{N}}{\text{m}}$$
  $k_2 = \frac{3EI}{h_2^3} = 20 \frac{\text{N}}{\text{m}}$   $k_3 = \frac{3EI}{h_3^3} = 6 \frac{\text{N}}{\text{m}}$   $f_1 = \frac{1}{2\pi} \sqrt{\frac{k_1}{m}} = 9.0 \text{ Hz}$   $f_2 = \frac{1}{2\pi} \sqrt{\frac{k_2}{m}} = 3.2 \text{ Hz}$   $f_3 = \frac{1}{2\pi} \sqrt{\frac{k_3}{m}} = 1.7 \text{ Hz}$ 

You are tasked with collecting 50 seconds of ground acceleration data. Approximately what sampling rate would you choose to ensure you see a range of frequencies relevant for concern about building shaking?

<sup>&</sup>lt;sup>1</sup>Since **bandwidth**  $B \triangleq \omega_{\text{high}} - \omega_{\text{low}}$  and usually for Fourier transforms  $\omega_{\text{low}} = 0$ , hence  $B = \omega_{\text{high}}$ .

## Result:

 $\bullet$  Concerned about frequencies:  $\fbox{1}-\fbox{10}$  Hz

• Sample at a minimum of: 20 Hz

Consider the time-data (top-right) and its Discrete Fourier Transform (bottom-right).

Based on this information the building that probably shakes most is 20 cm high.

Note: This data was sampled at  $100~\mathrm{Hz}~$  (much higher than needed).

